



NRv2 and LoFlo Installation Guide.

Simply screw NRv2 ® between the thread of the meter (concentric type) and the thread of the manifold.

Locate in the Groundbreaker or boundary box as standard.

The patented innovative design will, when two units are used in series, provide a double check valve offering protection up to fluid category 2.

Please note: any such work must have prior approval of the local water company.