



WOW

Warm Outside Water Tap Preparation of WOW box

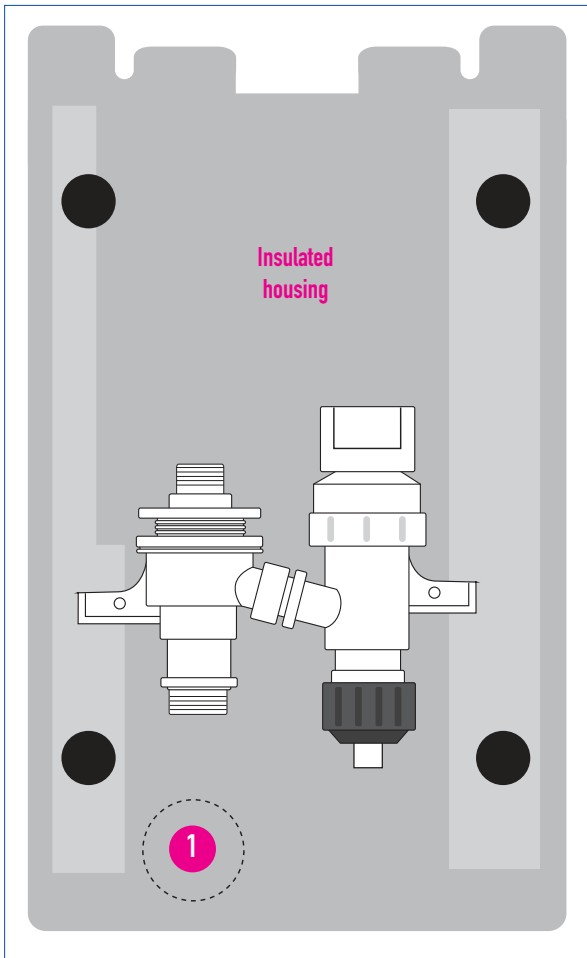


- 1 Knock out pre formed disc to create 25mm access hole in rear of WOW box.

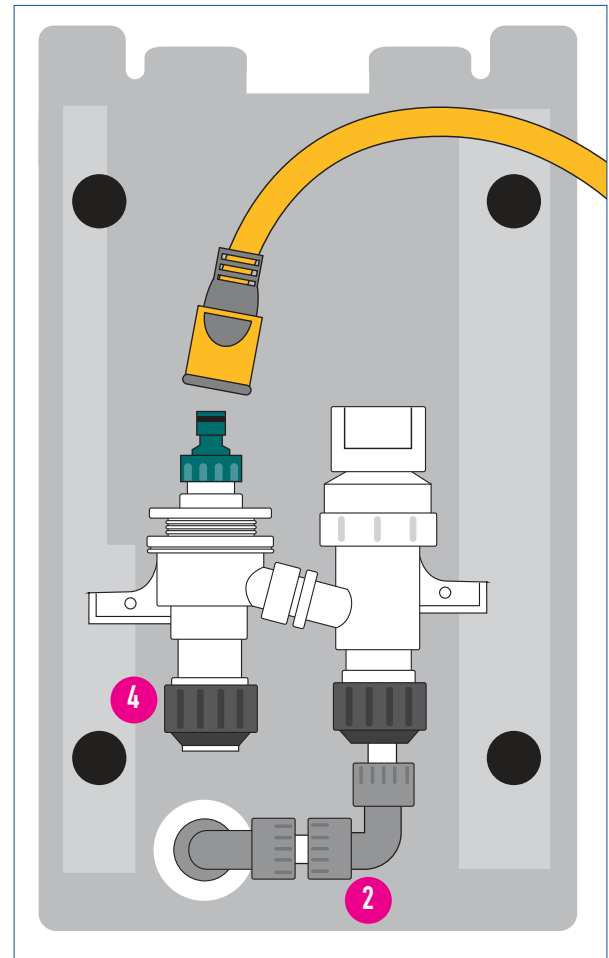

- 2 Connect assembled pipe work to the right side of the manifold.

Materials

Pick list (these items supplied with unit)	Part numbers
Polyfast 25mm x 15mm Adaptor Set	10164
Blanking Cap	26473
Manifold hoseslock adaptor	26472
Additional components required	
Speedfit shut off valves	7114
Reliance TMV	25150
Speedfit double check valve	7115
Speedfit barrier pipe	10520
Polyplumb elbow 15mm	21238
Polyplumb inserts 15mm	17068

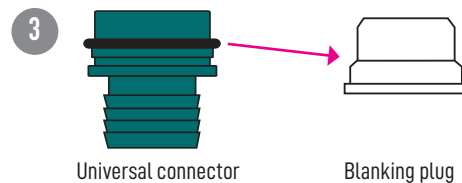


Remove O ring from green universal connector (the connector is not required for the installation of this product). Fit O ring onto blanking plug.

- 3
- 4 Fit blanking plug to the left hand side of the 25mm connector.
- 5 Temporarily fix WOW box to wall and mark location for 15mm pipe access.

For installation guide see over

WOW

Warm Outside Water Tap Installation guide

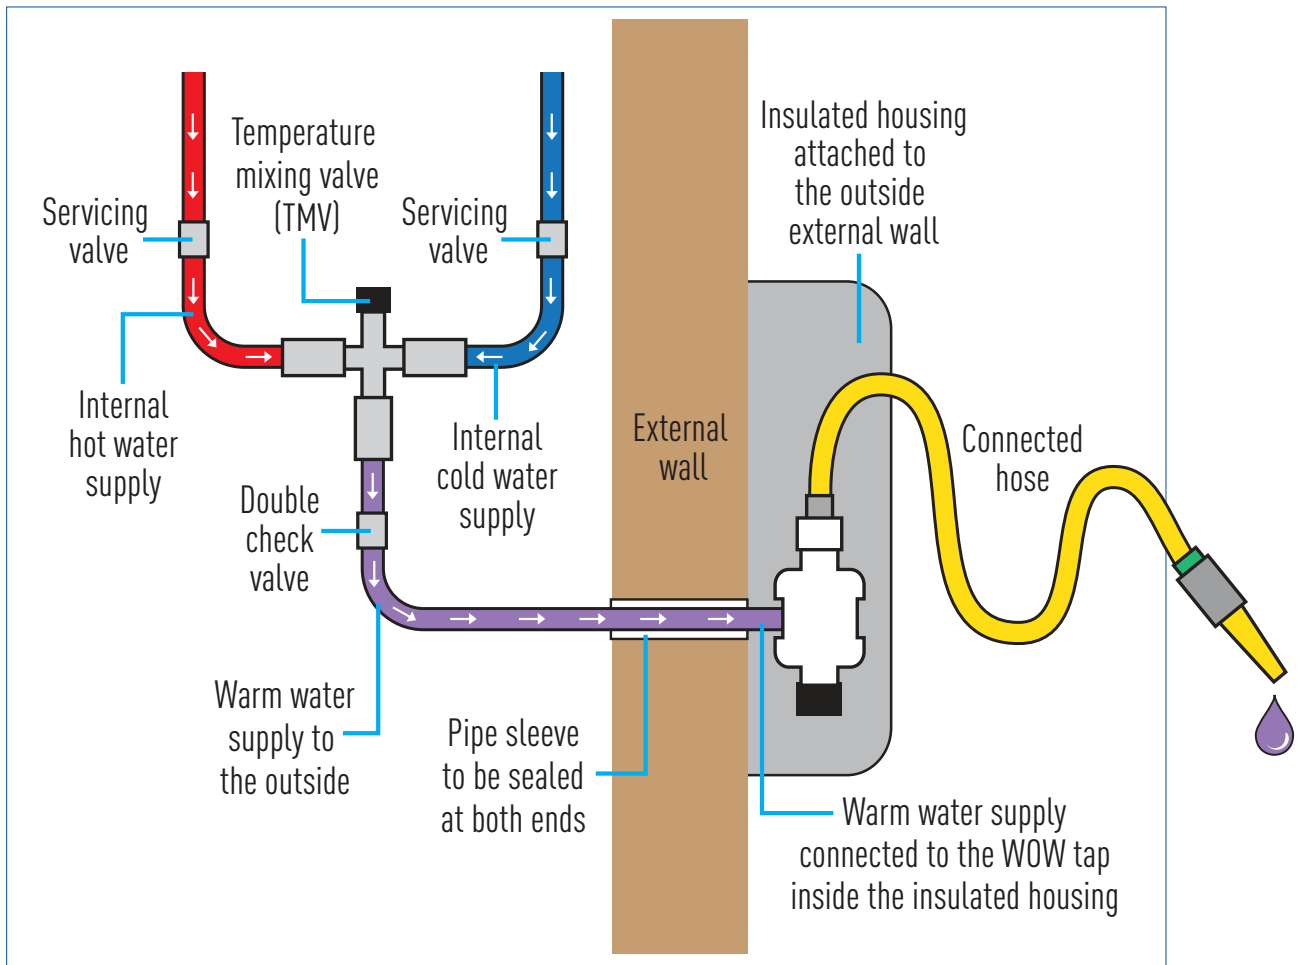

1. Locate hot and cold water supply.
2. Connect TVM and service valves as shown in the diagram.
3. Drill 25mm hole in wall and insert sleeve.
4. Connect 15mm pipe to TVM and install double check valve and feed through sleeved hole to the exterior of the property, as shown in the diagram.
5. Connect inlet pipe to 25mm connector.
6. Screw WOW box onto wall.
7. Test and flush the system.